


INSTALLATION INSTRUCTIONS

Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

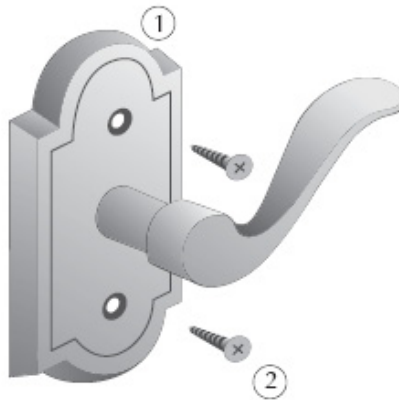

09 FUNCTION

PREP DOOR:

- A. Position where you want the trim located on the door. The backset and height from finish floor should match the active set. Drill a 3/4" diameter hole 1/4" into the door where the hub of the lever/knob contacts the door.

INSTALL HARDWARE:

- B. Making sure that the plate is parallel with the edge of the door, install two wood screws (2) to affix the plate(1) to the door. We recommend the use of a #5 VIX bit to pilot the screw holes for these screws. (If you do not have one, use a 3/32 drill bit to pilot the holes.) Hand tighten the screws; a power driver may strip them.